


WARNING

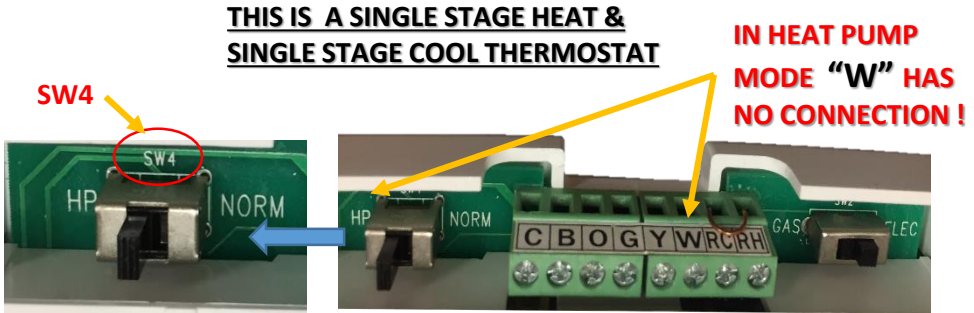

THIS IS A SINGLE STAGE HEAT & SINGLE STAGE COOL THERMOSTAT

IN HEAT PUMP MODE "W" HAS NO CONNECTION !

- MAKE SURE THE SWITCH **SW4** IS SET TO **"NORM"** FOR **NON-HEAT PUMP HVAC SYSTEM**. **NEVER** MOVE THIS SWITCH TO **"HP"** POSITION IF THE HVAC SYSTEM IS A **GAS** OR **ELECTRIC** HEATER.
- FOR HEAT PUMP HVAC SYSTEM, SET THE SWITCH **SW4** TO "HP" AND **"W" TERMINAL MUST BE LEFT OPEN (No connection)**.
- **"W"** IS CONNECTED TO HEAT WIRE FROM THE AIR HANDLER ONLY IF THE SWITCH **SW4** IS SET TO **"NORM"**
- HEAT PUMP IS THE SINGLE STAGE HEAT. THIS THERMOSTAT DOES NOT SUPPORT A SECOND ELECTRIC OR GAS FURNACE HEAT IN HEAT PUMP MODE. THEREFORE **"W" TERMINAL HAS NO CONNECTION AND MUST NOT BE CONNECTED IN HP MODE**.

WARNING.

MALFUNCTION WILL OCCUR IF "W" IS CONNECTED IN HEAT PUMP MODE (i.e. SWITCH SW4 SET TO "HP").

THIS THERMOSTAT DOES NOT SUPPORT A SECOND HEAT STAGE.